


AIR CONDITIONING GUIDE

There are two ways to control air conditioning.

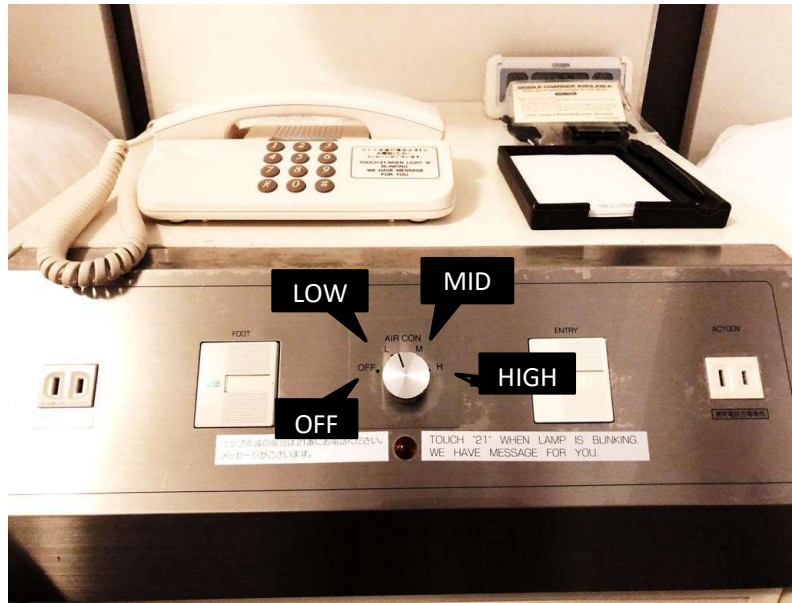

- ① Turn on the switch and adjust the air flow.
OFF : OFF L : LOW M : MID H : HIGH



- ② The thermostat is on the wall beside the bed.

The top display shows the current room temperature.

The bottom display shows the current thermostat setting.

Please adjust the temperature dialing the thermostat on the bottom.

Cooling and heating systems are controlled by the hotel operating.